



AIRGO ACDS PROCEDURES


1. Load tray with forklift or by hand.

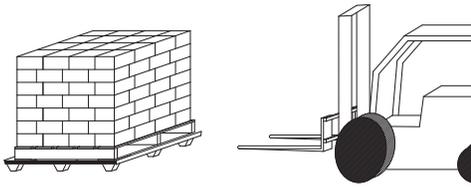


2. Slide interior liner over cargo and fasten to tray with straps.

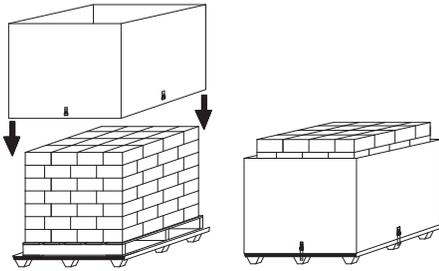

3. Or, attach the interior liner to the bottom tray first, then load by hand from the top.

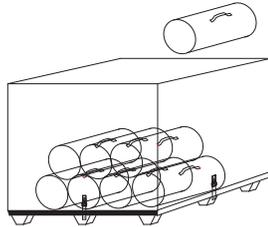


4. Rotate top tray so tan lip is directly over document pouch. Attach top tray to exterior liner with straps.

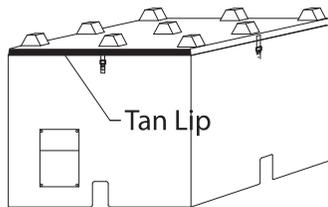


5. Insuring that top tray tan lip is directly over bottom tray tan lip slide exterior liner over interior liner.

When cargo extends above liner (up to 18") make sure the exterior liner is no higher than the red bars (visible in the strap slots).

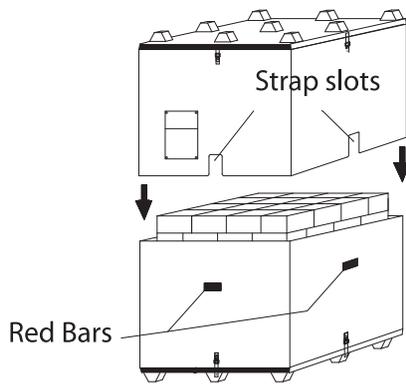


6. Banding / Strapping guidelines:

- For maximum restraint (combat off load, sling load, etc.) use 4 bands or straps, or 2 VATTS assemblies.

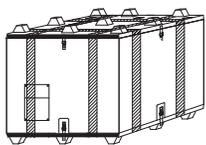


4 Bands/Straps

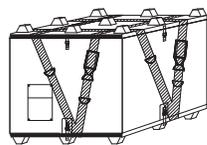


2 VATTs assemblies

- When rollover is less likely (warehousing, inside 20' container, rail transport, etc.) use 2 bands or straps, or 1 VATTs assembly.

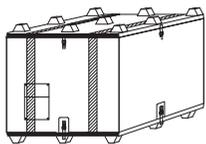


2 Bands/Straps

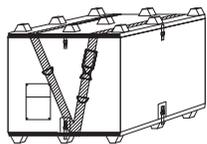


VATTs assembly

7. Align tray tan lips when stacking ACDS.


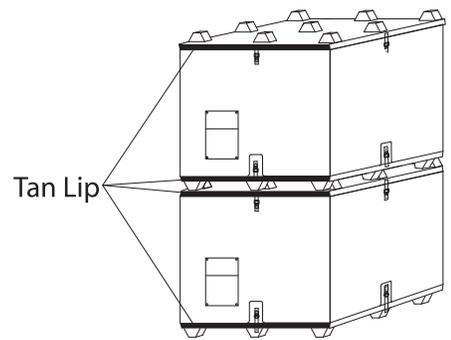


8. When stacking multiple ACDS for movement on an AIRGO Consolidation Base (ACB) use two VATTs assemblies or 4 to 8 straps.


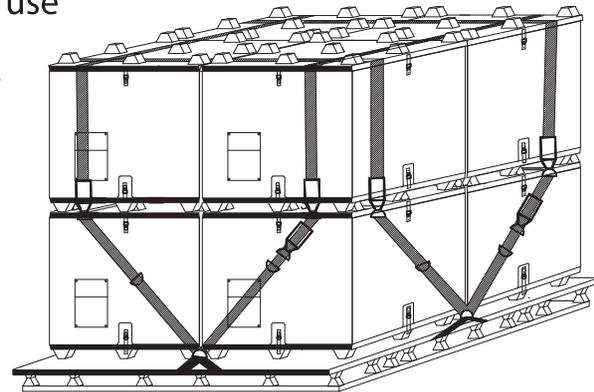


ACB NSN: 8145-01-521-2723


9. Unload ACDS by unstrapping top tray and removing it from liner, or by sliding top tray and exterior liner up and off of interior liner.

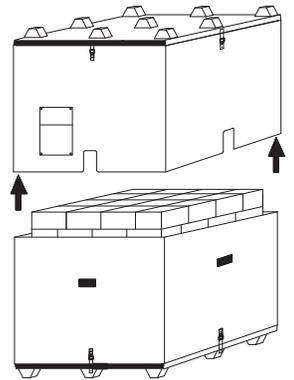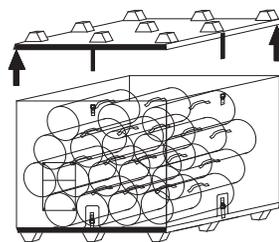

10. Unfasten interior liner from bottom tray and slide liner(s) up and off.

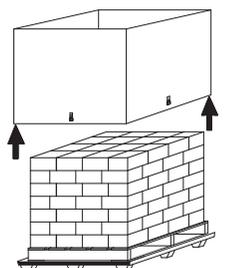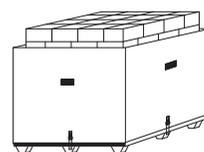

11. Unstrap all liners from trays. Slide exterior liner over interior liner, then collapse ACDS by pushing together opposing corners.

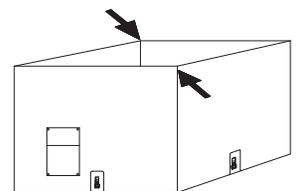

12. Load 16 ACDS 44T liners into one ACDS 88T liner and nest 32 ACDS 44T trays on top of the ACDS 88T top tray. Band or Strap the ACDS Kit together.

